

Intelligent P-spot massager

PRODUCT MANUAL

Dual motors

7 vibration modes

The shaft heats up to 100°F

The vibrator is made from silicone

Charging

- For maximum pleasure charge before every use.
- Connect to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



How To Use

Without remote control

- Hold the \circlearrowleft button to turn on/off.
- Press quickly to cycle through 7 modes

With the remote control

- Press the button to turn the remote on/off.
- Use the w button to cycle through 7 modes.

Heating

- Hold the 🖔 button to turn the heating on/off.
- Allow up to 5 mins for the shaft to warm up.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352