ed@nfantasys



10 massage modes

Flexible shaft

Waterproof

Made from silicone

Power


- The item is powered by 2 AAA batteries
- Unscrew the base of the toy to open the battery compartment.
- Follow the polarity instructions inside the battery case.
- When storing for an extended period, please remove batteries from the toy.



PRODUCT MANUAL

How To Use

- Press the button to turn the toy on/off. The LED light will light up.
- Press the W button to cycle through 10 massage modes.

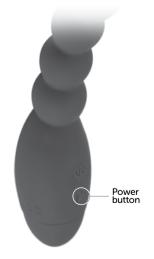

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352