edénfantasys



Lilac rabbit G

PRODUCT MANUAL

Multi-speed vibration

Rotating beads

Two-way rotation

Made from soft TPR material and ABS plastic

Power

- The item is powered by 4 AA batteries.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



How To Use

- Rotate the **T** dial control to turn vibration on/off.
- Adjust the dial control to increase or reduce the vibration intensity.
- Rotate the **R** dial control to turn rotation on/off.
- Adjust the dial control to increase or reduce the rotation intensity.
- Press the button to change the direction of rotating beads.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.

edénfantasys

www.edenfantasys.com



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

Customer Service 24/7 Phone: +1 (770) 604 - 1352