ed@nfantasys



7 vibration modes

3 thrusting speeds

Realistic design

Made from soft TPE material

Power

- The item is powered by 3 AA batteries.
- Unscrew the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



3 AA batteries

Long John

PRODUCT MANUAL

How To Use

- Hold the **W** button to turn on/off.
- Press the W button quickly to cycle through 7 vibration modes.
- Hold the 1 button to activate thrusting.
- Press the button to increase thrusting intensity.
- Press the button to decrease thrusting intensity.



Power Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352