ed@nfantasys



7 thrusting and massage modes

Heats up to 108° F

Realistic design

Flexible shaft

Splashproof

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.
- Do not use the device while charging.



Magnetic USB charging port

PRODUCT MANUAL

How To Use

- Hold the button to turn the thrusting on/off.
- Press it quickly to cycle through 7 thrusting modes.
- Hold the W button to turn the massage on/off.
- Press it quickly to cycle through 7 massage modes.
- Hold the button to turn the heating on/off.
- Allow for up to 5 mins for the shaft to warm up.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the shaft before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.
- Do not get water inside the control unit as it is not waterproof.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352