# ed@nfantasys



12 vibration modes

Remote-controlled

Made from PU-coated plastic

#### **Power**

- The item is powered by 2 AAA batteries.
- Unscrew the item to insert the batteries.
- Follow the polarity instructions inside the battery case.



PRODUCT MANUAL

#### **How To Use**

- Insert 1 AAA battery to power the remote.
- Hold the button to turn on/off.
- Press it quickly to cycle through 12 vibration modes.



### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water, silicone or oil-based lubricant.
- The item can be sterilized with a 5% bleach solution or alcohol.



## **Warning**

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352