



Love link

PRODUCT MANUAL

10 vibration modes

Removable bullet

**Made from silicone
and ABS plastic**

Power

- The item is powered by 4 LR44 batteries (included).
- Unscrew the base of the bullet to insert batteries.



4 LR44
batteries

How To Use

- Hold the button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.



Power
Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352