# ed@nfantasys



7 vibration modes


**Powerful motor** 

Warms up to 118°F

Made from silicone and ABS plastic

# Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 40 minutes of play.

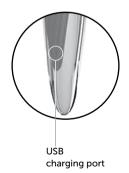


# **How To Use**

- Hold the 🖒 button to turn on/off.
- Press the **M** button to cycle through 7 powerful vibration modes.

#### Heating

- Press the button to turn the heating on/off.
- Allow up to 5 mins for the toy to warm up.

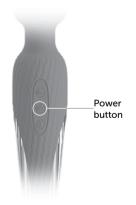

### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



# Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

# edenfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352