edenfantasys



Mini wand

PRODUCT MANUAL

Discreet design

Splashproof

Made from ABS plastic

Power

- The item is powered by 3 LR44 batteries (included).
- Open the battery compartment to replace the batteries.



batteries

How To Use

 Slide the power switch to turn on/off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352