

**90 to 200 thrusts per minute**

**3 thrusting speeds**

**Attachment heats up to 149° F**

**Adjustable angle**

**Realistic design**

**Remote controlled**

**Adjustable harness**

**Multispeed bullet included**

**Made from TPE, PU, faux-leather**

# Miss Boss

**PRODUCT MANUAL**

## Set includes


- Sex machine, warming dildo attachment, harness, bullet, remote control, USB charging cable.

## Charging

- The remote control is powered by 1 CR1220 battery (included).
- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 4.5 hours for 50 minutes of play.
- Do not use the device while charging.
- When the power level is low, the LED light indicator will flash quickly.

USB  
charging port

Light indicator

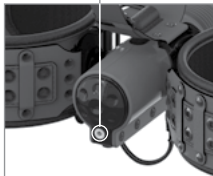

## Before Use

- Wear the harness over the hips (hip size 36" - 44 1/2").
- Slide your legs into the straps and adjust to fit your curves (maximum thigh size 23 1/2").
- Screw the attachment counterclockwise to finish the assembly.



Attachment  
slot

- Connect the bullet to the sex machine for extra stimulation.



Bullet  
connection  
port

- All pieces of the machine can be used separately.
- The sex machine can be detached from the harness using the swivel clip.
- Night cuffs can be detached from the harness and the sex machine. Unbuckle the thigh cuffs, unscrew them from rotary clamps and detach the metal clips from the harness.

## How To Use

---

### Without remote control

- Hold the **⏻** button on the machine to turn it on/off. The LED light will flash.
- Press it quickly to cycle through 3 thrusting speeds.
- The heating function is activated automatically once the sex machine is on. Allow for up to 3 mins for the attachment to warm up.
- Hold the **C** button to adjust the angle of the sex machine, the machine will switch back to the lowest thrusting intensity. Release the **C** button to fix the machine in the desired position.
- The multispeed bullet is activated automatically once the sex machine is on.
- The machine will turn off automatically in 3 minutes when not in use.



### With remote control

- Hold the **⏻** button on the remote to turn the machine on/off.
- Press it quickly to cycle through 3 thrusting speeds.
- Hold the **M** button to adjust the angle of the sex machine, the machine will switch back to the lowest thrusting intensity.
- Release the **M** button to fix the machine in the desired position.



## Cleaning and Care

---

- Remove the attachment and the bullet for thorough cleaning.
- Do not wash the attachment while it is connected to the sex machine, or while the power is on.
- Use a toy cleaner/mild soap with water to clean the attachment before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Keep the sex machine and remote control away from water - they are not waterproof.
- Use with water-based lube only, no silicone lubricants.

## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Do not use the machine if you have hypertension, heart or gynecologic diseases, or those which cannot endure strong stimulation, as these conditions increase the risk of bruising.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasys**  
THE NEW INTIMACY

[www.edenfantasys.com](http://www.edenfantasys.com)

Customer Service  
10 AM - 7 PM EST  
Phone: +1 (770) 604 - 1352