edénfantasys



Moon rabbit

PRODUCT MANUAL

7 sucking modes

7 vibration modes

2 powerful motors

Memory function

Made from silicone


Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



How To Use

- Hold the **M** button to turn the vibration on/off.
- Press it quickly to cycle through 7 vibration modes.
- Hold the \bigcirc button to turn the sucking motion on/off.
- Press it quickly to cycle through 7 sucking modes.

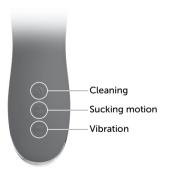

Cleaning and Care

- Hold the button for 2-3 seconds while holding the sucking attachment under running water.
- Then hold the button again to empty the water out and finish cleaning.
- Do not press the sucking motion button when you clean the toy.
- Do not submerge the toy in the water.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352