



Moonlight

PRODUCT MANUAL

10 vibrating modes

10 thrusting modes

3 rotating speeds

Waterproof IPX6

**Made from silicone
and ABS plastic**

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 150 minutes for 60 minutes of play.
- Do not use the device while charging.



Magnetic USB charging port

How To Use

Without remote control

- Hold the  button to turn the toy on/off.
- Press it quickly to cycle through 10 vibrating and thrusting modes on the shaft.
- Double press the  button to pause vibrating and thrusting mode.
- Press the  button quickly to cycle through 3 rotating and vibrating modes on the clit attachment.
- Double press it to pause rotating and vibrating modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST

Phone: +1 (770) 604 - 1352