ed@nfantasys



Multispeed lady finger

PRODUCT MANUAL

Multiple massage intensities

Discreet design

Made from ABS plastic

Power

- The item is powered by 1 AA battery.
- Unscrew the base of the item to insert the batteries.
- Follow the polarity instructions inside the battery case.



How To Use

- Rotate the dial base to turn massage function on/off.
- Adjust the dial base to increase/ reduce the massage intensity.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based, silicone, or oil-based lubricants.



Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352