### edénfantasys



## Multispeed rabbit egg

PRODUCT MANUAL

#### **Multispeed vibration**

Rabbit clitoral attachment

**Pleasure ticklers** 

Made from soft TPR material and ABS plastic

#### Power

- Insert 2 AA batteries to power the control pack.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



2 ÅA batteries

#### How To Use

- Rotate the dial control on the control pack to turn on/off.
- Adjust the dial control to increase/ reduce vibration intensity.

Dial



**Cleaning and Care** 

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use.

Store away from heat and sunlight.

• Use with the water-based lube only, no silicone lubricants.



#### Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

# edénfantasys

#### www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352