



Myth rotating

PRODUCT MANUAL

8 massage modes

5 rotation modes

Rotation beads

Remote control

Waterproof IPX7

Strong suction cup

**Made from silicone
and ABS plastic**

Charging

- For maximum pleasure charge the toy before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 90 minutes of play.
- Do not use the device while charging.
- The remote is powered by CR2032 battery (included).



Magnetic charging port

How To Use

Without remote control

- Hold the  button to turn on/off. The LED light will flash.
- Press it quickly to cycle through 5 rotation modes.
- The toy will automatically turn off after 5 minutes when not in use.

With the remote control

- Remove the protective film from the battery compartment of the remote control before use.
- Hold the  button on the toy's base to activate the standby mode.
- Press the  button on the remote to turn on/off.
- Press the  button on the remote quickly to cycle through 5 rotation modes.
- Hold it to turn rotation mode off.
- Press the  button on the remote quickly to cycle through 8 massage modes.
- Hold it to turn massage mode off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the toy before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST.
Phone: +1 (770) 604 - 1352