

Orgy machine

PRODUCT MANUAL

7 vibration modes

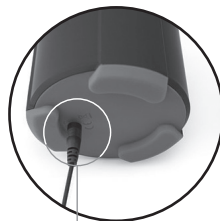
**7 tongue licking
modes**

Realistic opening

**Made from silicone
and skin-like TPR
material**




Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1 hour of play.



USB
charging port

How To Use

- Hold the  button to turn on/off.
- Press the  button quickly to cycle through 7 vibration modes.
- Press the  button quickly to cycle through 7 tongue licking modes.



Power
button

Cleaning and Care

- Undo the sleeve into 2 pieces for easy cleaning.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352