edénfantasys



Oro-sensual

PRODUCT MANUAL

Sucking pump

3 sucking speeds

Removable suction cup

Flickering tongue

6 vibration modes for the G-spot end

2 independent motors

Made from silicone and ABS plastic

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1 hour of play.



Magnetic charging port

How To Use

Suction

- Connect the attachment.
- Press the toy to your labia.
- Hold the

 button to activate the suction mode, you should feel a gentle tugging sensation.
- Press it quickly to cycle through 3 sucking intensities.
- Hold the button to release pressure before removing the pump.
- If pain or discomfort occurs, immediately release pressure by pressing the
 button and discontinue use.

Licking

• Hold the • button to turn the flickering tongue on/off.

Vibration

- Hold the **W** button to turn the vibrating end on/off.
- Press it quickly to cycle through 6 vibration modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with the towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.

Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352