



## Oscillating tongue

PRODUCT MANUAL

### 10 vibration modes

---

Suction cup

---

Waterproof

 
---

Made from silicone  
and ABS plastic

### Charging

---


- For maximum pleasure charge the toy and the remote control before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.

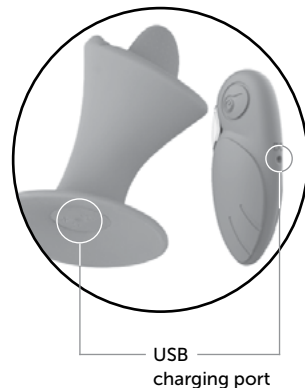


## How To Use


---


### Without remote control

 - Hold the  button to turn on/off.
- Press it quickly to cycle through 10 powerful modes.

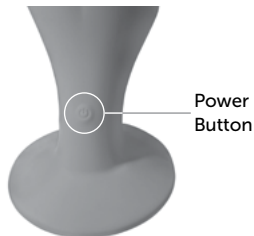

### With the remote control

 - Hold the  button to turn on/off.
- Press it quickly to cycle through 10 powerful modes.

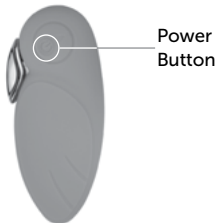

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352