ed@nfantasys



12 massage modes

Thrusting motion

Memory function

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 40 minutes of play.
- Do not use the device while charging.



Oula

PRODUCT MANUAL

How To Use

Without remote control

- Hold the 🖒 button to turn on/off.
- Press it quickly to cycle through 12 massage modes.

With the remote control

- Insert 1 AAA battery to power the remote
- Hold the **U** button on the toy to enter the standby mode.
- Press the W button on the remote to cycle through 12 massage modes.
- Hold the **b** button on the toy to turn it off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: + 1 (770) 604 - 1352