## ed@nfantasys



# Panty secret

**PRODUCT MANUAL** 

## 9 massage modes

Magnetic clip for secure fit

**Ergonomic shape** 

Remote range up 32 ft

Waterproof

Made from silicone and ABS plastic

#### Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 30 minutes for 30 minutes of play.
- Do not use the device while charging.
- The remote control is powered by 1 CR2032 battery (included).



Magnetic USB charging port

#### **How To Use**

#### Without remote control

- Hold the button to turn the toy on/ off.
- Press it quickly to cycle through 9 massage modes.

#### With the remote control

- Hold the button on the toy to enter the standby mode.
- Hold the **b** button on the remote to turn it on/off.
- Press the W button to cycle through 9 massage modes.
- Hold the button on the toy to turn it off.



#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.



### Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352