



Panty Butterfly

PRODUCT MANUAL

12 vibration modes

Memory function

**Magnetic clip for
secure fit**


**Sensual ribs, wings and
antennas**

Remote-controlled

**Made from silicone
and ABS plastic**

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.
- The remote is powered by 1 AAA battery.

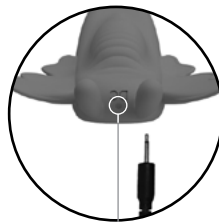


USB
charging port

How To Use


- Place the vibrator inside the panty and attach the magnetic clip to keep the vibrator in place.



- Hold the  button to turn on/off.
- Press it quickly to cycle through 12 vibration modes.

With the remote control

- Press the **M** button to cycle through 12 powerful modes.

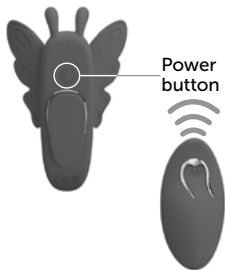

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352