



Panty Throb

10 vibration modes

Wearable design

Magnetic wings for secure fit

Texturized for extra stimulation

Remote control

Waterproof

Made from silicone and ABS plastic

Charging


- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 2.5 hours for 2 hours of play.
- The remote control is powered by 1 CR2032 battery (included).






USB charging port

How To Use

Without remote control

- Hold the  button on the toy to turn on/off.
- Press it quickly to cycle through 10 vibration modes.

With the remote control

- Hold the  button on the base for standby mode. The LED lights will flash.
- Hold the  button on the remote to turn on/off.
- Press the  button to cycle through 10 vibration modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.
- Do not get water inside the remote as it is not waterproof.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352