



Playful rabbit vibrator

PRODUCT MANUAL

Triple stimulation

7 vibration modes for clit and anal attachments

3 intensities for rotating shaft

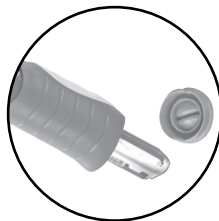
Realistic design

Waterproof

Made from soft TPR
material and ABS
plastic




Power

- The item is powered by 3 AAA batteries.
- Rotate the lid counter-clockwise to open the battery compartment.
- Follow the polarity instructions inside the battery case.



3 AAA
batteries

How To Use

- Hold the  button to turn on/off.
- Press the  button quickly to cycle through 7 vibration modes.
- Press the  button to cycle through 3 intensities for the rotating shaft.



Power
Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352