



Poise

PRODUCT MANUAL

7 vibration modes

3 beads' rotation speeds

Three-way stimulation

Made from silicone

Waterproof

Power

- The item is powered by 3 AA batteries.
- Unscrew the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



3 AA
batteries

How To Use

- Hold the **⏻** button to turn on/off.
- Press the **⏻** button quickly to cycle through 7 vibration modes.
- Hold the **↻** button to activate beads' rotation.
- Press the **▲** button to increase beads' rotation intensity.
- Press the **▼** button to decrease beads' rotation intensity.



Power
Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352