



Quick wand

PRODUCT MANUAL

Powerful motor

Flexible neck

Discreet design

Waterproof IPX5

**Made from silicone
and ABS plastic**

Power

- The item is powered by 1 AAA battery.
- Open the lid of the toy to insert the battery into the battery compartment.
- When storing for an extended period, please remove the battery from the toy.



1 AAA
battery

How To Use

- Slide the power switch to turn on/off.



Power
switch

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352