edénfantasys



Vibrating realistic pussy

PRODUCT MANUAL

Realistic design

Multi-speed vibrations

Removable vibrating bullet

Made from skin-like TPR material and ABS plastic

Power

- The item is powered by 2 AA batteries.
- Open the compartment to insert the batteries.
- Follow the polarity instructions inside the battery case.



² AA batteries

How To Use

- Rotate the dial control to turn on/off.
- Adjust the dial control to increase/ reduce the vibration intensity.



Cleaning and Care

- Remove the bullet for thorough cleaning.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Dust lightly with the corn starch for better use. Store away from heat and sunlight.
- Do not get water inside the bullet and control pack as they are not waterproof.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352