# edénfantasys



# Riding thruster

PRODUCT MANUAL

# 5 thrusting modes

7 vibration modes

**Remote control** 

**Realistic design** 

Strong suction cup for hands-free play

Made from silicone and ABS plastic

# Charging

- For maximum pleasure, charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 4 hours for 1 hour of play.
- Do not use the device while charging.



## How To Use

#### Without remote control

- Hold the 🙂 button on the base of the toy to turn on/off.
- Press it quickly to cycle through 7 vibration and thrusting modes.

#### With the remote control

- Hold the 🖒 button on the base of the toy for standby mode.
- Press the 🙂 button on the remote to turn the toy on/off.
- Press the *NV* button to cycle through 7 vibration modes.
- Press the 📕 to cycle through 5 thrusting modes.



## **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

# edénfantasys

#### www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352