



Rimming P-spot pleaser

PRODUCT MANUAL

10 vibration modes

**3 beads' rotation
modes**

Ergonomic design

Waterproof

**Made from silicone
and ABS plastic**

Charging


 
- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1,5 hours of play.
- Do not use the device while charging.
- The remote control is powered by a 1 CR2032 battery (included).






 

Magnetic
charging port

How To Use

Without remote control

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.
- Press the  button to cycle through 3 beads' rotation intensities.

With the remote control

- Hold the  button on the toy for standby mode.
- Press the  button on the remote control to turn the toy on.
- Press the  or  button quickly to cycle through 10 vibration modes.
- Press the  button again to pause the vibration.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352