edénfantasys



Robo stroke

PRODUCT MANUAL

Soft realistic opening

Noduled pleasure tunnel

10 stroking modes

5 stroking speeds

Real seductive voice

Silicone panels for better grip

Made from skin-like TPR material and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Take the cap at the handle off to reveal the USB port.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



How To Use

- Remove the cap to start your play.
- Hold the 😃 button to turn on/off.
- Press the **1** button quickly to cycle through 10 stroking modes.
- Press the + or buttons to adjust stroking intensity.
- Connect the included earphones to enjoy the seductive moans.



Cleaning and Care

- Remove the cap.
- Unscrew the upper part with the realistic opening, open the outer lid, and take the sleeve out of the plastic case for thorough cleaning.
- Use a toy cleaner/mild soap with water to clean the sleeve before and after each use.

Cleaning and Care

- Pat with a towel and allow it to airdry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Do not get water inside the case as it is not waterproof. Wipe it down with the wet cloth/tissue and dry it out completely before inserting the sleeve.
- Insert the sleeve inside the case to install it, close the outer lid, and screw the upper part with the realistic opening clockwise to finish the assembly.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352