ed@nfantasys



Rogue

3 thrusting modes

5 massage modes

Heats up to 107 °F

Pleasure nubs and ribs


Remote control

Strong suction cup

Made from silicone and ABS plastic

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 50 minutes of play.
- Do not use the device while charging.
- The remote control is powered by 1 CR2032 battery (included).

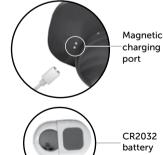

PRODUCT MANUAL

How To Use

- Hold the **b** button on the base of the toy to turn on/off.
- Press it quickly to cycle through 5 thrusting and massage modes.

With the remote control

- Hold the **b** button on the base of the toy for standby mode.
- Press the U button on the remote to turn the toy on/off.
- Press the 1 to cycle through 3 thrusting modes.
- Press the W button to cycle through 5 massage modes.

Heating

- Press the button twice to turn the heating mode on/off. The LED light will flash.
- Allow up to 5 mins for the toy to warm up.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352