



Rose G

PRODUCT MANUAL

9 massage modes

**9 rolling massage
beads modes**

**9 come-hither motion
modes**

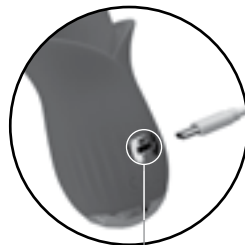
Digital screen

Waterproof IPX6

**Made from silicone
and ABS plastic**



Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1 hour of play.
- Do not use the device while charging.



Type-C
charging port

How To Use

- Hold the  button to turn the toy on/off.
- Press it quickly to cycle through 9 massage modes.
- Press the  button quickly to cycle through 9 rolling beads and come-hither motion modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Cleaning and Care

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352