## edénfantasys



# Rotating masturbator

PRODUCT MANUAL

### Soft realistic opening

4 stroking modes

Noduled pleasure tunnel

Made from skin-like TPR material and ABS plastic

#### Charging

- For maximum pleasure charge before every use.
- Take the cap at the handle off to reveal the USB port.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



#### How To Use

- Apply water-based lube on yourself and inside the toy before starting the play.
- Hold the 😃 button to turn on/off.
- Press the **W** button quickly to cycle through 4 stroking modes.



#### **Cleaning and Care**

- Remove the cap.
- Unscrew the upper part with the realistic opening, open the outer case, and take the sleeve out of the plastic case for thorough cleaning.

- Use a toy cleaner/mild soap with water to clean the sleeve before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Do not get water inside the case as it is not waterproof. Wipe it down with the wet cloth/tissue and dry it out completely before inserting the sleeve.
- Dust lightly with the corn starch for better use. Store away from heat and sunlight.
- Insert the sleeve inside the case to install it and screw the upper part with the realistic opening clockwise to finish the assembly.
- Use with the water-based lube only, no silicone lubricants.only, no silicone lubricants.



#### Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



#### www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352