



# Rouser

**3 intensities for licking attachment**

---

**8 vibration modes**

---

**2 independent motors**

---

**Waterproof**


---

**Made from silicone and ABS plastic**

## Charging

---



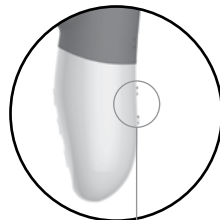

 
- For maximum pleasure, charge before every use.
- Connect the the toy included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 130 minutes for 60 minutes of play.
- Do not use the device while charging.



Magnetic charging port

## How To Use

---

- Press the  button to turn on/off.
- Press the  button to cycle through 8 vibration modes.
- Hold the  button to turn the vibrating shaft off.
- Press the  button to cycle through 3 intensities for licking attachment.
- Hold the  button to turn the licking attachment off.



Power  
button

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

**edenfantasy**  
THE NEW INTIMACY

[www.edenfantasy.com](http://www.edenfantasy.com)

Customer Service 24/7  
Phone: +1 (770) 604 - 1352