# ed@nfantasys



Sensu

## **Thrusting motion**

2 motors

12 vibration modes

Made from silicone

Waterproof

#### Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.



PRODUCT MANUAL

#### **How To Use**

- Hold the 🖒 button to turn on/off.
- Press the N button quickly to cycle through 12 vibration modes.
- Hold the N button to turn the vibration off.
- Press the \$\frac{1}{2}\$ button quickly to cycle through 3 thrusting modes.
- Hold the \$\\$\$ button to turn the thrusting motion off.



#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



### Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352