ed@nfantasys



Sensual silicone egg

PRODUCT MANUAL

20 vibration modes

Made from silicone and ABS plastic

Waterproof

Power

- Insert 2 AAA batteries to power the control pack.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



How To Use

With control pack

- Press the 🖒 button to turn on/off.
- Press the W button to cycle through 20 powerful modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352