edenfantasys



Sensualist X

PRODUCT MANUAL

10 vibration and rotation modes

2 independent motors

Turbo mode

Remote control

Realistic design

Strong suction cup

Made from silicone

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 100 minutes of play.
- Do not use the device while charging.



USB charging port

How To Use

Without remote control

- Hold the button to turn on/off. The LED light will flash.
- Press it quickly to cycle through 10 massage and rotation modes.
- Press the button for an intensity burst (fades after 25 secs).

With remote control

- Hold the button on the base of the toy for standby mode.
- Press the **b** button on the remote to turn on/off.
- Press the w button to cycle through 10 massage and rotation modes.
- Press the button for an intensity burst (fades after 20 secs).



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.





www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352