

edenfantasy
THE NEW INTIMACY



90-180 thrusts per minute

6 thrusting speeds

Attachment heats up to 108° F

Kneepads for extra comfort

Travel bag case with detachable straps

Adjustable position

Remote control (up to 16 feet)

Made from skin-like TPR, leather, and ABS plastic

Sexobot

PRODUCT MANUAL


Set includes

- Sex machine, warming dildo attachment, electric cord with adapter (WORKS ON 220V ONLY!), power bank with charging cable, remote control, travel bag.
- Additional attachments sold separately.



Power

- The sex machine is powered by a power bank with a charging cable (included) only!
- Plug the adapter into an electrical outlet and attach the cable to the power bank to charge it.
- A full charge takes up to 3 hours for 50 minutes of play.
- The power bank is fully charged when the light indicator changes from red to green.
- Keep the power bank charged to enjoy your fun.

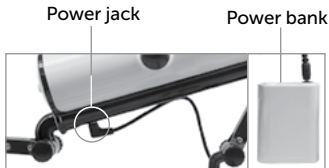

DON'T USE THE ELECTRIC CORD WITH AN ADAPTER IF YOU HAVE A VOLTAGE LOWER THAN 220V, AS THE MACHINE WON'T OPERATE!

How To Use

- Open the bag and screw the attachment counterclockwise to finish the assembly.



- Adjust for a comfortable angle and height using tension knobs.




- Rotate the knob to reset the telescopic mechanism before and after use.



How To Use

- Connect the included cable to the power bank to power up the sex machine.
- Press the power switch to turn on/off.
- Press the **↕** button to cycle through 6 thrusting intensities.
- Press the **I** button to cycle through 9 attachment intensities (additional attachments sold separately). The heating attachment has only 1 frequency. Wait 5-20 minutes for the attachment to warm up.
- Hold the **I** button to turn the attachment off.

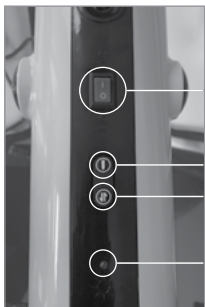

Power switch

Function

Thrusting

Light indicator

With the remote control

- The remote is powered by 1 CR2025 battery (included).
- Press the **⏻** button to turn on/off.
- Press the **A** button to cycle through 6 thrusting intensities.
- Press the **B** button to cycle through 9 attachment intensities (additional attachments sold separately). The heating attachment has only 1 frequency. Wait 5-20 minutes for the attachment to warm up.



Power button

Cleaning and Care

- Unscrew the attachment clockwise for thorough cleaning.
- Use a toy cleaner/mild soap with water to clean the attachment before and after each use.
- Pat with a towel and allow it to air-dry completely.

- Do not get water inside the machine as it is not waterproof. Wipe it down with the wet cloth/tissue and dry it out completely.
- Screw the attachment counterclockwise to finish the assembly.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352