## edénfantasys



**Shine** 

PRODUCT MANUAL

## 12 massage modes

**LED light** 

Flared base for safe play

Remote control

Waterproof IPX7

Made from silicone and ABS plastic

## Charging

- For maximum pleasure charge before every use.
- Connect to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
  A full charge takes up to 70 minutes
- A full charge takes up to 70 minutes for 60 minutes of play.
- Do not use the device while charging.



#### How To Use

#### Without remote control

- Hold the **b** button to turn the toy on/off.
- Press it quickly to cycle through 12 massage modes.

#### With the remote control

- Hold the **b** button on the toy to activate the standby mode.
- Press the button on the remote quickly to cycle through 12 massage modes.
- Hold the button on the toy to turn it off.



### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



## **Cleaning and Care**

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

# edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352