edénfantasys



Silicone contoured egg

PRODUCT MANUAL

12 vibration modes

Made from silicone and ABS plastic

Waterproof

Power

- Insert 2 AAA battery to power the control pack.
- Unscrew the base to insert batteries.
- Follow the polarity instructions inside the battery case.



How To Use

With control pack

- Press the ON/OFF button to turn
- on/off.

Press the **12** button to cycle through 12 powerful modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Do not get water inside the control pack it is not waterproof.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



www.edenfantasys.com



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

Customer Service 24/7 Phone: +1 (770) 604 - 1352