



Silicone sassy G

PRODUCT MANUAL

10 massage modes

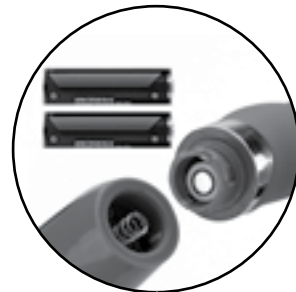
**Bulged for G-spot
stimulation**

Waterproof

**Made from silicone
and ABS plastic**



Charging

- The item is powered by 2 AAA batteries.
- Screw the base of the item counterclockwise to insert the batteries.



2 AAA
batteries

How To Use

- Press the  button to turn the toy on/off. The LED light will flash.
- Press the  button to cycle through 10 massage modes.



Power
button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.
- If you do not plan on using the device for a long time, please remove the batteries before putting it away.



Cleaning and Care

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352