



Silicone Nipple Teasers

PRODUCT MANUAL

Multispeed

Removable bullets

Pleasure ticklers

Made from silicone
and ABS plastic

Power

- The control pack is powered by 3 AA batteries.
- Open the lid to insert the batteries.
- Follow the polarity instructions inside the battery case.



3 AA batteries

How To Use

- Rotate the dial control to turn on/off.
- Adjust the dial control to increase/reduce massage intensity.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: 1 (770) 604 - 1352