# edénfantasys



# Soul Kiss

PRODUCT MANUAL

# **3** powerful motors

10 air pulse and licking modes

10 massage modes

Wearable design

Waterproof

Made from silicone and ABS plastic

## Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 120 minutes for 65 minutes of play.
- Do not use the device while charging.



Magnetic USB charging port

### **How To Use**

#### Without remote control

- Hold the top 🕿 button to turn the receiver's end on/off.
- Press it quickly to cycle through 10 massage modes.
- Hold the bottom 🕉 button to turn the giver's end on/off.
- Press it quickly to cycle through 10 massage modes.
- Hold the 👙 button to turn the clitoral attachment on/off.
- Press it quickly to cycle through 10 air pulse and licking modes.



#### With the remote control

- Hold the top \land button on the toy and the remote to turn the receiver's end on/off.
- Press it quickly to cycle through 10 massage modes.

- Hold the bottom South button on the toy and on the remote to turn the giver's end on/off.
- Press it quickly to cycle through 10 massage modes.
- Hold the 😌 button on the toy and the remote to turn the clitoral attachment on/off.
- Press it quickly to cycle through 10 air pulse and licking modes.

# **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.

## Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

# edénfantasys

#### www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352