



**Sparkle
Deep Buzz**

PRODUCT MANUAL

10 massage modes

**Flared base
for safe play**

Remote control

Waterproof IPX5

**Made from silicone
and ABS plastic**

Charging


- For maximum pleasure charge before every use.
- Connect to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 1 hour for 1 hour of play.
- Do not use the device while charging.





 

USB charging port

How To Use

Without remote control

- Hold the  button to turn the toy on/off.
- Press it quickly to cycle through 10 massage modes.

With remote control

- Remove the protective film from the remote control's battery compartment before use.
- Hold the  button on the toy to activate the standby mode.
- Press the  button on the remote to turn it on/off.
- Press the  /  buttons on the remote quickly to cycle through 10 massage modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352