edenfantasys



10 vibration modes

Waterproof

Made from ABS plastic

Power

- The item is powered by 2 AAA batteries
- Unscrew the base of the bullet to open the battery compartment.



PRODUCT MANUAL

How To Use

- Hold the button to turn on/off.
- Press it quickly to cycle through 10 vibration modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based, silicone, or oil-based lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 24/7 Phone: +1 (770) 604 - 1352