



Sugar

7 vibration modes

Removable bullet

Waterproof

**Made from
soft TPE material
and ABS plastic**

Power

- The item is powered by 1 AAA battery.
- Unscrew the base of the bullet to insert the battery.
- Follow the polarity instructions inside the battery case.



1 AA battery

How To Use

- Hold the button to turn on/off.
- Press it quickly to cycle through 7 vibration modes.



Power Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air dry completely.
- Dust lightly with the corn starch for better use.
- Store away from heat and sunlight.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352