



Sway

PRODUCT MANUAL

2 independent motors

7 massage modes

**4 finger-motion
modes**

**Rabbit
clitoral attachment**

Waterproof

**Made from silicone
and ABS plastic**



Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 65 minutes of play.
- Do not use the device while charging.




USB
charging port

How To Use

- Press the  button to turn the toy on/off.
- Press the  button to turn the massage mode on.
- Press it quickly to cycle through 7 massage modes.
- Hold it to turn the massage mode off.

Finger-motion

- Press the  button to turn the finger-motion mode on.
- Press it quickly to cycle through 4 finger-motion modes.
- Hold it to turn the finger-motion mode off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352