



Swish

PRODUCT MANUAL

3 powerful motors

3 thrusting modes

10 air pulse and licking modes

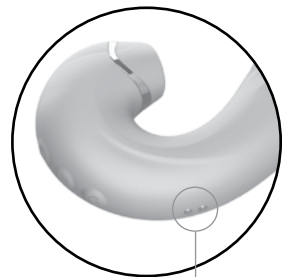
10 massage modes

Waterproof

**Made from silicone
and ABS plastic**



 
Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The intermittent glow indicates charging in progress.
- A full charge takes up to 100 minutes for 45 minutes of play.
- Do not use the device while charging.



Magnetic USB
charging port

How To Use

- Hold the  button to turn the G-spot end on/off. The LED light will flash.
- Press it quickly to cycle through 10 massage modes.
- Hold the  button to turn the thrusting mode on/off. The LED light will flash.
- Press it quickly to cycle through 3 thrusting modes.
- Hold the  button to turn the air pulse and licking modes on/off. The LED light will flash.
- Press it quickly to cycle through 10 air pulse and licking modes.



Power
Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352