



Ta-tas play

PRODUCT MANUAL

10 rotation modes

3 sets of attachments

Pleasure ticklers

Waterproof IPX5

**Made from silicone
and ABS plastic**


Charging


- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 1.5 hours for 1 hour of play.
- Do not use the device while charging.



Magnetic charging port

How To Use

- Hold the  button to turn on/off.
- Press it quickly to cycle 10 rotation modes.

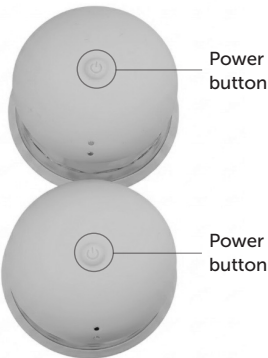

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the toy before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST.
Phone: 1 (770) 604 - 1352