



Tango

PRODUCT MANUAL

10 thrusting modes

10 massage modes

Two independent parts


Remote control

Waterproof IPX6

Made from silicone and ABS plastic

Charging


- For maximum pleasure, charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge for the cock ring takes up to 1 hour for 2.5 hours of play.
- A full charge for the thrusting vibrator takes up to 0.8 hours for 0.7 hours of play.
- Do not use the device while charging.

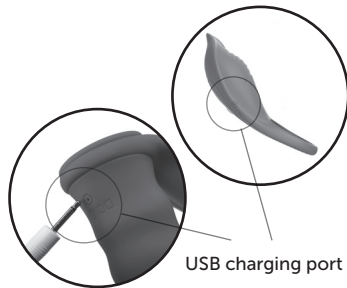


How To Use

Without remote control

Thrusting Vibrator

- Hold the  button on the thrusting vibrator to turn it on/off. It'll activate in standby mode.
- Press it quickly to cycle through the 10 thrusting modes.





Vibrating Ring

- Hold the  button on the cock ring to turn it on/off. It'll activate in standby mode.
- Press it quickly to cycle through the 10 massage modes.





With the remote control

If only one of the toys is turned on.





Thrusting Vibrator


- Hold the  button on the thrusting vibrator to turn it on/off. It'll activate in standby mode.
- Press the  button on the remote to turn it on.
- Press the  on the remote to cycle through the 10 thrusting modes.
- Hold the  button on the remote to turn the toy off completely.

Vibrating Ring

- Hold the  button on the cock ring to turn it on/off. It'll activate in standby mode.
- Press the  button on the remote to turn it on.
- Press the  on the remote to cycle through the 10 massage modes.
- Hold the  button on the remote to turn the toy off completely.

If both toys are turned on.

- Hold the  buttons on the thrusting vibrator and cock ring together to activate them in standby mode.
- Press the  button on the remote to turn it on.
- Press the  on the remote to cycle through the 10 thrusting and massage modes simultaneously.
- Hold the  button on the remote to turn both toys off completely.

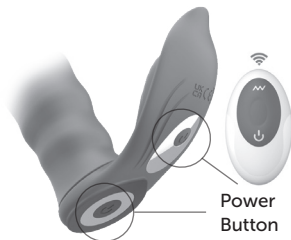

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352