



Tango

Dual motors

7 vibration modes


The shaft heats up to
100°F

The vibrator is made
from silicone

Waterproof

Charging


- For maximum pleasure charge before every use.
- Connect to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.

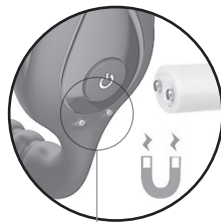



Magnetic
charging port

How To Use

Without remote control


- Hold the  button to turn on/off.
- Press quickly to cycle through 7 modes.

With the remote control

- Press the  button on the remote.
- Use the  button to cycle through 7 powerful modes.

Heating

- The heating function activates automatically once the vibrator is on.
- Allow for up to 5 mins for the shaft to warm up.

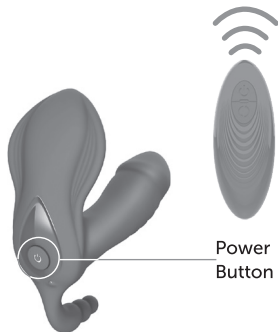

Cleaning and Care

- Use mild soap and water to clean the product.
- Pat with a towel and allow it to air dry completely.
- Use with the water-based lube only, no silicone lubricants.
- The item can be sterilized with a 5% bleach solution or alcohol.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352